

Example Interface of 3 Stepper Drivers to PC Parallel Port

NOTE:

If enable signals are not used, do not populate OP1 and where OP1 would have been installed, short the pads corresponding to pins 4 and 5. This modification must be made to each driver board.

If enable signals are used, they must be connected to spare outputs on the parallel port.

DB25 PARALLEL PORT CONNECTOR

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25

